To Adjust The Projector Forwards/Backwards



Note: To make adjustments to meet your demands, screws must be loosed in a specific order. (When the length of inside arm (895mm) don't meet your demands, then you should loose the screws on the outside arm to adjust the middle arm. Under this circumstance, the number read on the middle arm is right).

To Adjust The Projector Upwards/Downwards



To Adjust The Vertical Tilt Knob



Adjustment Knob



Screen Adjustment Direction

To Adjust The Horizontal Roll Knob



To Place The Decorative Cover



Note: When all adjustments are done, the wall plate covers can be used to cover the blank area on the top of wall plate. The number of wall plate cover used depends on the size of blank area. But the wall cover must be used in an specific order as the picture on left shows. Finally, put the wall cover on.

Product Information:

| Model | LT30B-D |
|------------------|---|
| NET Weight | 12. 6lb (5.7kg) |
| Load Capacity | 22lb (10kg) |
| Adjustable Range | 19.5"-49. 2" (495mm-1250mm) |
| Adjustable Angle | $\pm5^\circ$ tilt, left\right, front\rear and lateral rotation adjustment |



Deluxe 500-1300



- Sufficient expertise is required for installing this projector wall mount.
- Do not use the projector wall mount for purposes other than for which it is designed.

M Projector Mount Short Throw

• Be sure to read this manual thoroughly and to do the installation work safely.

Keep this manual available for future reference.

Important Safety

- Be sure this manual is completely understood before installation work.
- 2 Installation or dismounting of the projector from the projector wall mount must be carried out olny by qualified service personnel (two or more).
- f A Use with products heavier than the maximum weights(Weight Capacity z <22lb(10kg)) indicated may result in instability causing possible injury.
- For safety reasons, check the strength of the wall before installation. If the wall is not strong enough, reinforce it sufficiently before installation.
- Do not make alterations to the projector wall mount.
- (5) Do not install the projector wall mount on a wall subject to vibration or impact.
- (6) To avoid fire, do not install the projector with the projector wall mount in a humid or excessively dusty place.
- Use the supplied accessories only. Use of accessories other than those supplied may result in damage to the projector wall mount.
- (B) When dismounting the projector from the projector wall mount, be sure to unplug the AC power cord and other connecting cables beforehand.
- Do not hit or hang any heavy objects on the projector wall mount. If the projector wall mount is damaged, stop use and contact a qualified service person immediately.
- D Please install this apparatus only on the horizontal surface instead of the slanting one.
- * Manufacturer is not liable for any damages or injury caused by mishandling or improper installation.

Checking The Supplied Accessories





To Set The Projector Wall Mount On The Wall



The bracket is suitable for concrete wall mounting or wooden stud wall.

• Concrete wall mounting thickness must be a minimum 4" (100mm). Anchor bolt and screw (M6 × 55) are needed to be used for concrete wall installation.

• Dry-wall wall thickness must be a minimum 4.5" (114mm). Only screw(M6 × 55) is needed to be used for installation, and gypsum board thickness less than 0.59" (15mm).

ø10~11

If the wall is not strong enough, reinforce it sufficiently before installation.

• Please contact reseller if you have any questions

about mounting surface issue.



The arrows up

screw (M6 × 55) are needed

for installation in concrete wall mounting

The cables

through the support arm.

Loosen the screws with L3 allen wrench,

pull out the support arm around 4" (100mm)

and make power cable & signal cables go



Dry-wall mounting Not use anchor bolt

When installation on the wood stud wall. Align the center of the wall mount plate with the center of the stud. The arrows

screw (M6 × 55) are needed for installation in dry-wall mounting



The cables can be got through the wall plate by three ways as shown in the pictures. Then, Tighten the screw "F" after locating the projector position.

a. Use the extend arms

Projector mounting plate





b. Do not use the extend arms







Tighten the screws

To Install The Projector On The Projector Wall Mount



Move the projector mounting plate leftwards/rightwards to decide the projector position.



Connect power cable and other signal cable to projector